

TiCad[®]

READ ME FIRST
TiCad ANDANTE



READ ME FIRST

TiCad ANDANTE

Congratulations!

You have chosen an excellent product manufactured by TiCad! All of our high-quality products are carefully handmade at our production facility in Altenstadt (Hessen, Germany).

To ensure that you will be able to enjoy your trolley for a very long time, please take some time to carefully read through these operating instructions, which contain important information that will make using your trolley a lot easier.

If you have any further questions regarding the use or care of your trolley, please contact your specialist dealer.

We would like to wish you many enjoyable games of golf and a lot of success! Your TiCad team

YOUR TICAD ANDANTE IN DETAIL

- | | |
|------------------------------|-----------------------------|
| 1 Delta leather handle | 10 Locking pin |
| 2 Umbrella adapter | 11 Locking brake |
| 3 Drawbar | 12 Knurled sleeve |
| 4 Top firm-fix connection | 13 Wheel made of GRP* |
| 5 Top bag holder | 14 Bottom bar |
| 6 Fastening straps | 15 Bottom bag holder |
| 7 Centre bar | 16 Front shaft |
| 8 Bottom firm-fix connection | 17 Front wheel made of GRP* |
| 9 Shaft | |

*Glass-fibre reinforced plastic (PA 6 GF 30)



Image:
TiCad Andante with GRP* wheels, also available as
TiCad Andante Classic with titanium wheels

SETTING UP YOUR TROLLEY

Fitting the shaft:

Before fitting the shaft, pull back the locking pin (black round handle) and turn it slightly to the right (about 45°). Next, insert the shaft halfway into the frame with the brake mounted on the left and release the locking pin by turning the black handle back again. You can now insert the shaft fully into the frame until it engages. To lock the shaft into place for the integrated locking brake, continue turning it until it engages again.



Shaft with locking pin groove and arrester



Locking pin

Attaching the wheels:

The wheels can be attached and removed by pulling back the knurled sleeve. When attaching the wheels, slightly turning the sleeve can make it easier for the wheels to engage.


Always make sure that no dirt gets into the hub. The hubs must not be oiled or greased.




Removing and attaching the wheels

Frame connections (firm-fix connections):

The frame of your TiCad trolley is assembled with firm-fix connections. To connect the frame sections, simply press them into one another and slightly turn one of the sections to allow the coupling system to engage (1+2). It will have engaged once the outer ring has slid over the joint. To open the connection, pull the outer ring back (3).

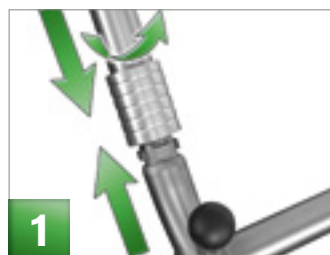

1

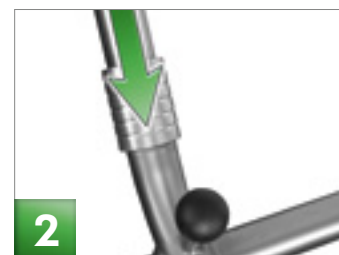

2




3

Engaging (1+2) and opening (3) the firm-fix connections

Bag holder:

The top bag holder is fitted into place with an expansion bolt. The expansion bolt must not be turned in too far (see images), because there has to be a gap between the expansion bolt and the start of the thread. To fit the bag holder, insert it into the frame and then align and fix it into place by twisting the bag holder.

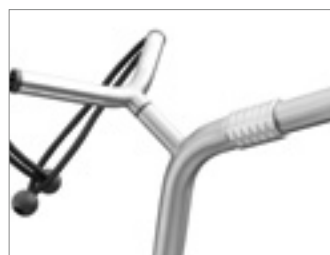

Bag holder



Expansion bolt in the correct position



Expansion bolt turned in too far

Attaching the golf bag:

Put your golf bag onto the trolley before attaching the drawbar. To fasten the golf bag, insert one of the round fasteners into the strap of the opposite fastening strap. When doing so, make sure not to flick the fasteners, as this may cause injury. To undo the fastening straps, hold on to the bottom strap and then pull out the top fastening strap with your other hand.

We recommend fitting the drawbar only once the golf bag has been attached to prevent the trolley from tipping over.




1



2



3

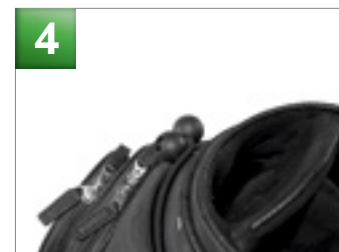

4

USING YOUR TROLLEY

Always handle your TiCad trolley slowly and carefully when moving over rough ground that contains stones or pot-holes. Avoid kerb edges.

Locking brake:

The locking brake has to be fitted on the left wheel. To open and apply the brake, simply move the locking lever back or forward.



Locking brake when opened



Locking brake when applied

Umbrella adapter:

The umbrella adapter is located at the top end of the drawbar. Screw the umbrella holder into the tapered adapter. The adapter can only be used in the standard position on the drawbar.



Umbrella adapter with
TiCad umbrella holder

Care:

The frame of your TiCad trolley is made of a high-quality, rust-proof material and has been sealed to keep out rain. The frame can be cleaned with a conventional household cleaning product – but **not** with abrasive cleaners. The titanium's shine can be restored with a special cleaning oil available from TiCad. The hubs of the wheels and the couplings **must not** be oiled or greased.

READ ME FIRST

TiCad ANDANTE

WARRANTY

Your TiCad trolley has been designed and built with great care. Please get in touch with your specialist dealer or contact TiCad directly if you notice anything unusual. The provision of spare parts or repairs performed under warranty do not extend the warranty period. The warranty does not apply to damage caused by carelessness or rough handling, overloading the trolley, inappropriate operation, external force, submersion in water and unauthorised persons' actions. The warranty only applies if the enclosed operating instructions have been observed and the trolley is being appropriately used and cared for. Technical changes and new developments do not entitle warranty holders to upgrades.

The warranty period for the titanium frame and the wheels is 5 years from the date of purchase. The warranty does not apply to wear parts such as e.g. tyres, leather handle, fastening straps.

Technical data and dimensions

Model	TiCad Andante
Weight of frame + wheels	4.4 kg
Pack size	66 x 32 x 17 cm

SERVICE

If you experience any problems with your TiCad trolley, please first contact your specialist dealer or get in touch with us at our office in Altenstadt, Germany.

We will then arrange for your TiCad trolley to be collected and returned to us and help you with the packaging material. If you want us to perform an inspection or repair, we also offer to assist you directly without contacting your specialist dealer.

For trolleys located outside Germany, please always contact your specialist dealer first or contact us directly.

Postal address: TiCad GmbH & Co. KG
Heegwaldstr. 3-5
D-63674 Altenstadt -Waldsiedlung
Germany
Phone: +49 (0)6047 / 987 90-14
Fax: +49 (0)6047 / 987 90-39
E-Mail: service@ticad.de

PUBLISHER

TiCad GmbH & Co. KG, Heegwaldstr. 3-5, D-63674 Altenstadt
www.ticad.de

The above information, wording and images have been largely standardised and are primarily intended to describe the trolley's basic functions. For this reason, the product supplied to you may slightly differ from the above descriptions, in particular if your trolley is a new version. This „Read Me First“ manual must not be copied or used otherwise in whole or part without TiCad GmbH & Co. KG's consent.

Please carefully retain your Read Me First manual and the original packaging.

Please read our General Terms and Conditions of Business at www.ticad.de.

Concept & graphic implementation:

Bild, Satz und Sieg – Eugen-Kaiser-Straße 18, 63450 Hanau
www.bild-satz-und-sieg.de